

SensoIRIS MC-Z IP55 Conventional Zone Module

EN54-18/17

Description

SensoIRIS MC-Z IP55 is an addressable conventional zone module, designed for application in addressable fire alarm systems, supporting TTE communication protocol. The module monitors the state of connected conventional fire line and reports for its status to the control panel. The module is designed with built-in isolator module according the requirements of EN54-17.


SensoIRIS MC-Z IP55 is powered on from the fire panel and can be controlled via the communication protocol.

The module is mounted in a separate plastic box suitable for wall mounting with IP55 protection and possible for outdoor installations.



Technical and Environmental Specifications

Operating Voltage Range	16 - 32VDC
Permissible voltage ripple	3.0Vpp@27VDC
External power supply of the zone.	17 - 32VDC
Max. Consumption with external power supply	150µA@27VDC
Max. Current consumption, loop power supply	5.5mA
Current consumption with 1 LED ON.	3mA
Max. Current consumption (ALARM Mode):	
- the zone is powered from "+L" terminal	20mA
- the zone is powered from "+H" terminal.	50mA
Max. number of conventional detectors in one zone	32
Wire Gauge for terminals	0.4mm ² - 2.0mm ²
Operating temperature	-10°C to +60°C
Relative humidity resistance.	(93 ± 3)% @ 40°C
Protection	IP55
Weight	~320g
Enclosure box (material, color, model)	PS, Gray, Z74JH PS
Dimensions	176 x 126 x 57mm

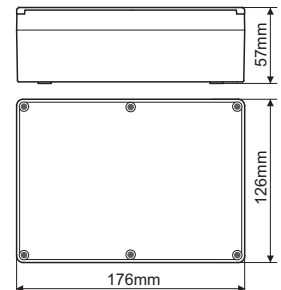

Packing Information

- **Single packing** - 1 unit SensoIRIS MC-Z IP55, dimensions 182 x 128 x 60 mm.
- **Carton packing box** - 24 units SensoIRIS MC-Z IP55, dimensions 566 x 415 x 239 mm.

Compatible Product Range


- **IRIS/IRIS PRO** - Addressable Fire Panel, plastic/metal box, 4 loops, 96 zones
- **IRIS8** - Addressable Fire Panel, metal box, 8 loops, 200 zones
- **SIMPO** - Addressable Fire Panel, metal box, 2 loops, 48 zones
- **SensoIRIS Programmer** - Address Programming Tool
- **SensoMAG Conventional Series** - Conventional detectors, modules, sirens, call points, etc.

Contact Information

SensoIRIS MC-Z IP55 Conventional Zone Module

EN54-18/17

● Connection Diagram

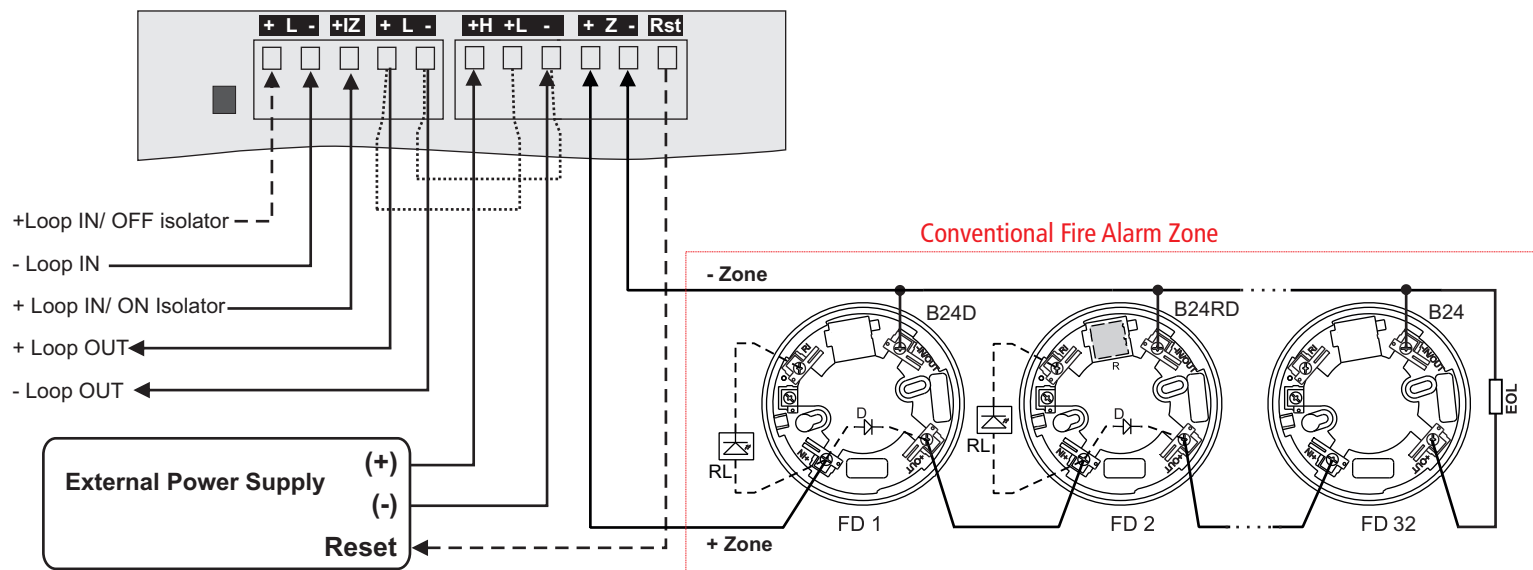

Description of the terminals (read from left to right):

- +L (+Loop IN/ OFF Isolator)*** - Connect the positive wire of the input communication line, in cases when the internal isolator module (build-in in SensoIRIS MC-Z IP55) is not used.
- L (-Loop IN)**** - Connect the negative wire of the input communication line, not depend on using the internal isolator.
- +IZ (+Loop IN/ ON Isolator)** - Connect the positive wire of the input communication line, in cases when the internal isolator module (build-in in SensoIRIS MC-Z IP55) is used.
- +L (+Loop OUT)*** - Connect the positive wire of the output communication line.
- L (-Loop OUT)**** - Connect the negative wire of the output communication line.
- +H (Power Zone Hi current)** - Input for power supply of the zone (external unit). The current consumption in the zone is in the range up to 50mA.
- +L (Power Zone Low current)** - Input for power supply of the zone (directly form the communication line). The current consumption in the zone is in the range up to 20mA.
- +Z (+Zone) and -Z (-Zone)** - Inputs for connecting the positive and negative zone wires
- Rst (Reset OUT)** - OC (open collector) type output. Used to Reset of the external power supply of the zone (if the device has this option).

* The terminals **+L (+Loop IN/ OFF Isolator)** and **+L (+Loop OUT)** are connected together.

** The terminals **-L (-Loop IN)** and **-L (-Loop OUT)** are connected together.

● Contact Information